


BECCUCCIO PER BIRRE STOUT *STOUT BEERS NOZZLE*

1

SVITARE BECCUCCIO E RIMUOVERE O-RING
UNSCREW NOZZLE AND REMOVE O-RING

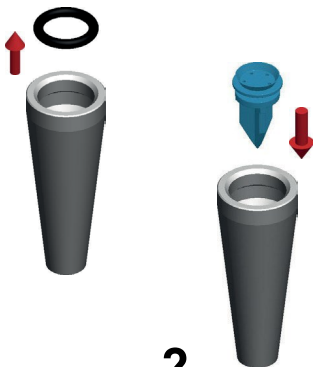

2

ASSEMBLARE INSERTO PER BIRRE STOUT
ASSEMBLE STOUT BEERS INSERT

3

RIMETTERE O-RING
INSERT O-RING AGAIN



4

BECCUCCIO PRONTO PER BIRRE STOUT
NOZZLE READY FOR STOUT BEERS